

Dräger PAS® Filter series Filters for external air supply systems

PAS Filters reliably clean air, e.g. from an existing high-pressure network, from liquid and solid particles, including oil vapour and smell. This not only means that you get breathing air which even exceeds the specifications of DIN EN 12021. You also save yourself the need of a separate breathing air line.



WALL-MOUNTED OR PORTABLE

The PAS Filters can be mounted to the wall or placed on the floor. The connections of the wall-mounted versions are located at the bottom. This enables users of breathing apparatus to move in all directions without kinking the hoses.

The portable version with carrying handle and side connections has three legs which prevent it from becoming dirty. They also ensure a firm hold on uneven surfaces.

MANUALLY ADJUSTABLE AIR PRESSURE

The primary pressure from the line can be easily adjusted at the filter using a key. This means that you can connect compressed air breathing apparatus according to DIN EN 14594 for positive pressure and normal pressure masks. The set pressure is displayed on the manometer directly at the filter.

COMPATIBLE WITH ALL DRÄGER BREATHING AIR SYSTEMS (E.G.):

- Dräger PAS Lite
- Dräger PAS Colt
- Dräger PAS Micro
- Dräger PAS AirPack
- Dräger ABIL

FURTHER ADVANTAGES

- two connection options:
for max. three (760 L/min) or max. five persons (1,080 L/min)
- included in the scope of supply:
active carbon and particle filters for solid and liquid particles incl. humidity, oil droplets and smells
- optional: Pre-filter for heavy soiling
- robust, stable housing made of polyethylene



Dräger PAS® Filter - portable




Dräger PAS® Filter - wall-mounted

TECHNICAL DATA

Dräger PAS Filter series

Dimensions (H x W x D)	430 x 280 x 162 mm
Weight	4.5 – 6.5 kg
Maximum capacity	760 / 1,080 L/min
Coalescing filter	yes
Activated carbon filter	yes
Maximum inlet pressure	16 bar
Inlet	F3000/3500: 1/4" BSP (female) F5000/5500: 3/8" BSP (female)
Outlets	3 / 5 x CEJN

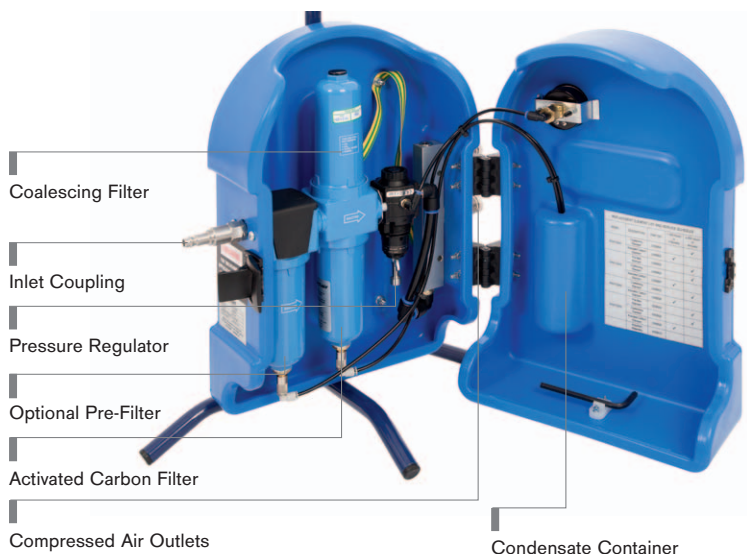

D-46350-2012

ORDER INFORMATION

3000 series	Max. capacity	Pre-filter	Outlets	Model	Weight	Order code
Dräger PAS F3000	760 (L/min)	-	3 x CEJN	mounted	4.5 kg	33 59 915
Dräger PAS F3000 P	760 (L/min)	-	3 x CEJN	portable	5.0 kg	33 59 916
Dräger PAS F3500	760 (L/min)	with pre-filter	3 x CEJN	mounted	5.5 kg	33 59 921
Dräger PAS F3500 P	760 (L/min)	with pre-filter	3 x CEJN	portable	6.0 kg	33 59 922

5000 series

Dräger PAS F5000	1,080 (L/min)	-	5 x CEJN	mounted	5.0 kg	33 59 923
Dräger PAS F5000 P	1,080 (L/min)	-	5 x CEJN	portable	5.5 kg	33 59 924
Dräger PAS F5500	1,080 (L/min)	with pre-filter	5 x CEJN	mounted	6.0 kg	33 59 925
Dräger PAS F5500 P	1,080 (L/min)	with pre-filter	5 x CEJN	portable	6.5 kg	33 59 926

HEADQUARTERS

Dräger Safety AG & Co. KGaA
Revalstrasse 1
23560 Lübeck, Germany

www.draeger.com

SUBSIDIARIES

AUSTRALIA

Draeger Safety Pacific Pty. Ltd.
Axxess Corporate Park
Unit 99, 45 Gilby Road
Mt. Waverley Vic 3149
Tel +61 3 92 65 50 00
Fax +61 3 92 65 50 95

CANADA

Draeger Safety Canada Ltd.
7555 Danbro Crescent
Mississauga, Ontario L5N 6P9
Tel +1 905 821 8988
Fax +1 905 821 2565

P. R. CHINA

Beijing Fortune Draeger Safety
Equipment Co., Ltd.
A22 Yu An Rd, B Area,
Tianzhu Airport Industrial Zone,
Shunyi District, Beijing 101300
Tel +86 10 80 49 80 00
Fax +86 10 80 49 80 05

FRANCE

Dräger Safety France SAS
3c route de la Fédération,
BP 80141
67025 Strasbourg Cedex 5
Tel +33 3 88 40 59 29
Fax +33 3 88 40 76 67

ITALY

Draeger Safety Italia S.p.A
Via Longarone 35
20080 Zibido San Giacomo (MI),
Italy
Tel +39 02 90 59 49 1
Fax +39 02 90 00 36 86

MEXICO

Draeger Safety S.A. de C.V.
Av. Peñuelas No. 5 Bodega No. 37
Fraccionamiento Industrial
San Pedrito
Querétaro, Qro México
Tel +52 442 246-1113
Fax +52 442 246-1114

NETHERLANDS

Dräger Safety Nederland B.V.
Edisonstraat 53
2700 AH Zoetermeer
Tel +31 79 344 46 66
Fax +31 79 344 47 90

REP. OF SOUTH AFRICA

Draeger South Africa (Pty) Ltd.
P.O.Box 68601
Bryanston 2021
Tel +27 11 465 99 59
Fax +27 11 465 69 53

SINGAPORE

Draeger Safety Asia Pte Ltd
67 Ayer Rajah Crescent
#06-03
Singapore 139950
Tel +65 68 72 92 88
Fax +65 65 12 19 08

SPAIN

Dräger Safety Hispania S.A.
Calle Xaudaró 5
28034 Madrid
Tel +34 91 728 34 00
Fax +34 91 729 48 99

UNITED KINGDOM

Draeger Safety UK Ltd.
Blyth Riverside Business Park
Blyth, Northumberland
NE24 4RG
Tel +44 1670 352-891
Fax +44 1670 356-266

USA

Draeger Safety, Inc.
101 Technology Drive
Pittsburgh, PA 15275
Tel +1 412 787 8383
Fax +1 412 787 2207